






P A Y K E Y™

CRANE MERCHANDISING SYSTEMS™
A Crane Co. Company

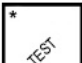 
Control Panel Configuration Settings for All MDB Mechs and Validators

See Compatibility List at www.paykeytech.com under Resources: Documentation for minimum eprom version requirements.

A. To **Stack** versus **Not to Stack**

Press  then  to scroll down the settings menu. Press  to toggle between and change menu options.

1. The following settings **WILL** stack bills and give change for \$1.00:


MDB MECH
MDB (*) – Press  to enter menu options and then make sure the display reads the following:

- 1. 1.00 ON
- 2. 2.00 ON
- 3. 5.00 ON
- 4. TKN OFF

(press “EXIT” to go back to main menu)

MDB CARD
CHANGE.1.00
ACC/STK.5.00
LOW.MSG 1.00
DECLINE.OFF
REVALUE.ON **
FAIL=CRDT
WINNER.OFF

2. The following settings **WILL NOT** stack bills and **WILL NOT** give change:

MDB MECH
MDB (*) – Press  to enter menu options and then make sure the following options are on:

- 1. 1.00 ON
- 2. 2.00 ON
- 3. 5.00 ON
- 4. TKN OFF

(press “EXIT” to go back to main menu)




MDB CARD
CHANGE.25
ACC/\$.5.00
LOW.MSG 1.00
DECLINE.OFF
REVALUE.ON **
FAIL=CRDT
WINNER.OFF

* if you want to Force Vend

** “on” if the machine is designated as a Revalue / PAYKEY™ Recharge Station; “off” if the machine is to only vend with Paykey™, cash and coins.




B. SureVend Machine Configuration - Return Cash versus Return Credit

1. Press , then  nine times until you see **FAIL=CASH** or **FAIL=CRDT**
 2. Press  and toggle between:
 - a) **FAIL=CASH** = return cash after 3 failed spiral rotations
 - b) **FAIL=CRDT** = credit returns to display to make another selection
-

C. Accountability Protection



This option should be used **only** to unlock machine and reset resettable sales and/or vend count numbers.

1. Press  then enter Code #0000. The display will read **#UNLOCKED**. Wait until display reads **READY**.




The machine is now unlocked – it should only be unlocked to reset the resettable values. To protect against resetting the resettable values, the supervisor needs to create a 4-digit code other than the factory code of “0000.” Thus, route drivers or attendants cannot unlock machine and reset the values.

C1. To reset the Supervisor Code

Once the machine is unlocked by following the steps above,

1. Press  then  until the display reads **SUPER 0000**
2. Use the number keys to enter a new code

If the Supervisor needs to lock the machine for any reason while the door is open, he must perform the following steps:

3. Press  then  until the display reads **#UNLOCKED**
4. Press  to change the mode to **#.LOCKED**

Note: the machine will automatically rest to #.LOCKED when the door is closed.





PAYKEY™



D. Retrieving **Non-Resetable** Paykey, Cash and Coin **Sales**

1. Press  → the display will show **NR\$ xx.xx** (total non-resetable Paykey, cash and coin sales)
-

E. Retrieving **Non-Resetable** Paykey, Cash and Coin **Vend Count**

1. Press 
 2. Press  until the display shows **NR xxxx** (cumulative non-resetable Paykey, cash & coin vend count)
-



F. Retrieving **Resetable** Paykey, Cash and Coin **Sales**

1. Press 
2. Press  until the display shows ****\$ xx.xx**

a) While in Resetable Sales Mode, Retrieving **Resetable** Paykey **Sales Only**

1. Press  → the display will show **DBT xx.xx** (the amount of money collected from card reader)
-

G. Retrieving **Resetable** Paykey, Cash and Coin **Vend Count**

2. Press 
3. Press  until the display shows **** xx**



P A Y K E Y™



When using a Crane machine as a Recharge Station, the vendor actually accumulates cash and coins from the customer for “future” sales. This can be considered as “deferred income” by your accounting department.

To engaged Recharge / Revalue Functions – see ** note under **Control Panel Settings** on page 1.

H. Retrieving **Resettable** Revalue / Recharge **Income**

1. Press



2. Press



until the display shows **RVL xx.xx**

I. Retrieving **Resettable** Revalue / Recharge **Vend Count**

3. Press



4. Press



until the display shows **RVL xx**

Note: “F – H” are resettable values. To protect against accidental or otherwise resetting, see **C. Accountability Protection** on page 2 to “lock out” resetting functions. If machine is “locked out,” these figures cannot be reset. If a vending machine has been reset, the resettable values will start accumulating from the last reset date.